




# Dome Type XIII Network Camera

## Quick Installation Guide

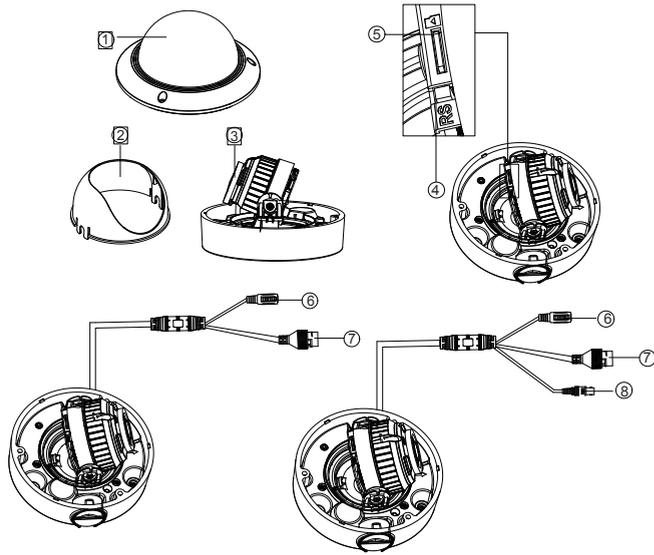

### 2. Memory Card Installation

- 1). Rotate the camera body to completely expose the memory card slot.
- 2). Insert the memory card into the memory card slot, and push to get it mounted.

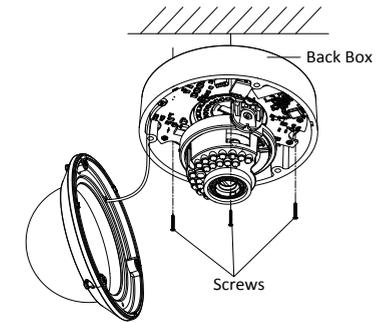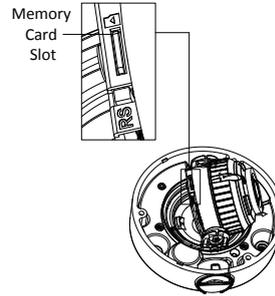


### 4). 3-Axis Adjustment.

- a. View the camera image using the monitor.
  - b. Loosen the tilt adjusting screw to adjust the tilt angle [0° to 90°]/[0° to 70°], hold the black liner to adjust the pan angle [0° to 355°], and hold the lens to rotate the camera [0° to 355°].
- Note: The tilting angle varies according to the different models as the figures below. Please refer to the actual device.

| No. | Description | No. | Description            |
|-----|-------------|-----|------------------------|
| 1   | Bubble      | 5   | Memory Card Slot       |
| 2   | Black Liner | 6   | Power Supply Interface |
| 3   | Lens        | 7   | Network Interface      |
| 4   | Reset       | 8   | Video Output Interface |

### 3. Ceiling Mounting



- 1). Attach the drill template (supplied) to the place where you want to fix the camera.
- 2). Drill three screw holes and cable hole (optional) in the ceiling according to the drill template.

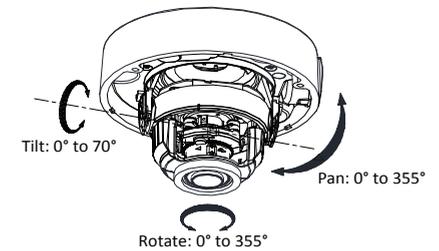

### Installation:


#### 1. Disassembling

- 1) Loosen the three screws on the edge of the bubble with the screw driver.
- 2) Lift and put aside the bubble.
- 3) Remove the inner black liner.

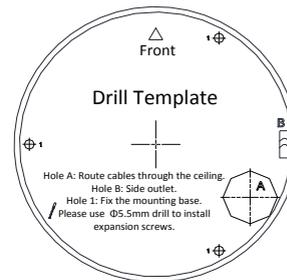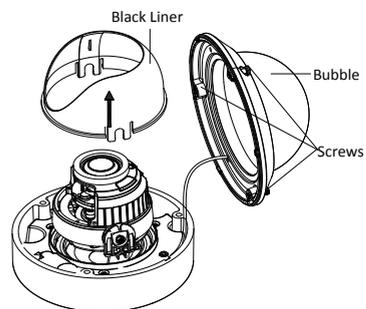

- 3). Align the holes of the back box with the drilled screw holes on the ceiling. And secure the camera with the supplied screws.

- 6). Install the inner black liner back to the camera.
- 7). Secure the bubble to the camera with screws.

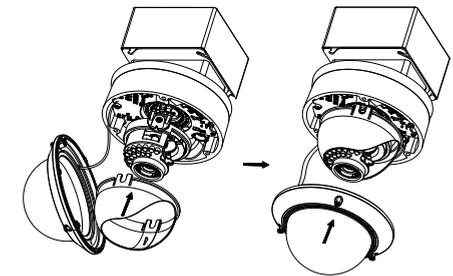

For detailed instructions of further configuration, please refer to the user manual of network camera.