


Bullet Type V Network Camera


Quick Installation Guide

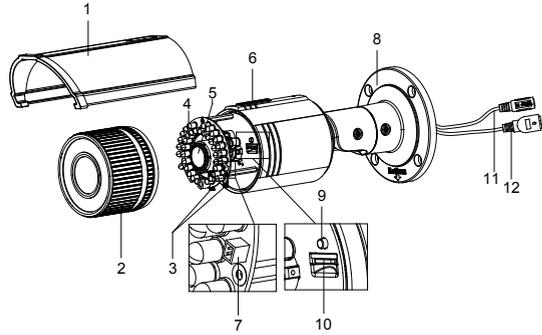

No.	Description	No.	Description
1	Sun Shield	7	Video Output Interface
2	Front Cover	8	Integrated Bracket
3	Zoom and Focus Lever	9	Reset Button
4	IR LED	10	SD Card Slot
5	Lens	11	Power Interface
6	Air Vent	12	Network Interface

Note:

1) To reset the default parameters to the camera, you need to press and hold the reset button and power on the camera. After the power on the camera, you must still press and hold the reset button for about 10 seconds. 2) This Series models support audio and alarm functions. The interfaces are shown as follows.

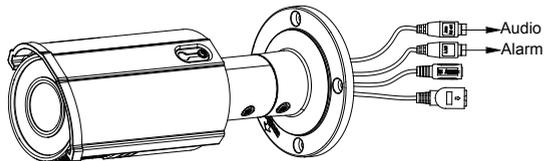

Installation


Note:

Please make sure that the wall is strong enough to withstand three times the weight of the camera.


Steps:

1. SD Card Installation


- 1) Rotate the TW M3X5 screw counterclockwise about 3 to 4 rounds to loosen it. Slide the sun shield according to the arrow direction.
- 2) Remove the sun shield according to the arrow direction.
- 3) Remove the front cover by rotating it counterclockwise.

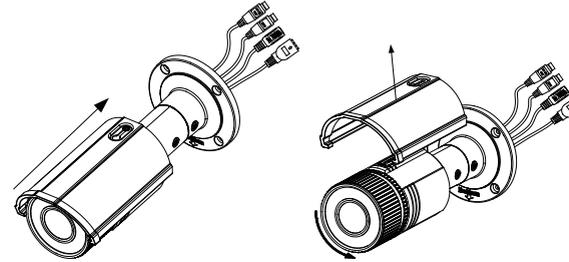

- 4) Insert the SD card to the SD card slot.
- 5) Rotate the front cover clockwise back to the camera and install the sun shield according to the arrow direction

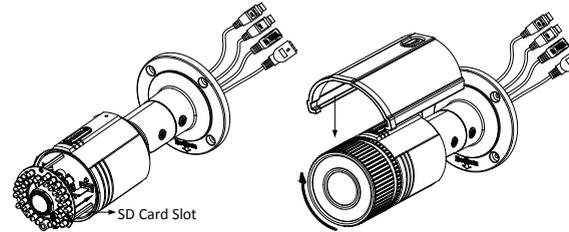


- 6) Slide the sun shield according to the arrow direction.
- 7) Rotate the TW M3X5 screw clockwise to tighten the sun shield.

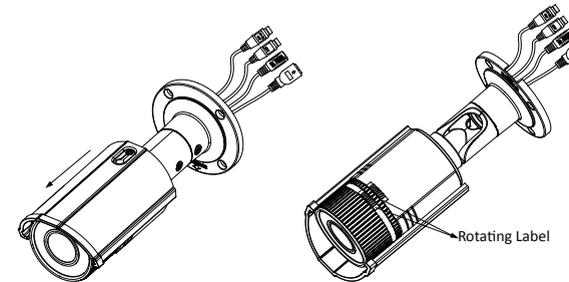


2. Drill the Holes

- 1) Attach the drill template (supplied) to the wall where the camera is to be mounted.
- 2) Drill screw holes in the wall according to the number one holes of the drill template.
- 3) If you need to route cables through the wall (or ceiling), cut a cable hole according to the drill template. Skip this step, if you want to route the cables on the surface of the ceiling.

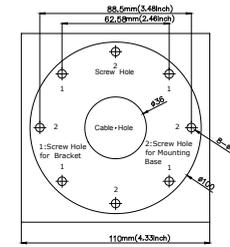

- 4) Route the cables of the camera.
- 5) Secure the camera to the wall (or ceiling) with expansion screws.

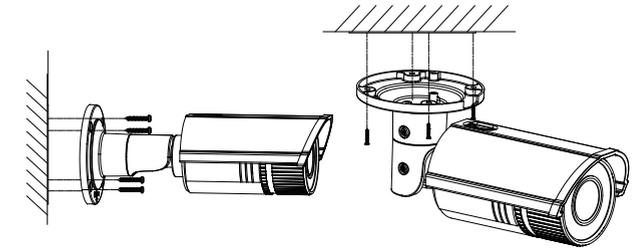

5. View Angle Adjusting

Pan Adjustment


Loosen the lock screw-1. Adjust the panning position of the camera. The adjusting range is from 0 degrees to 360 degrees. Tighten the lock screw-1.

Tilt Adjustment

Loosen the lock screw-2. Adjust the tilting position of the camera. The adjusting range is from 0 degrees to 90 degrees. Tighten the lock screw-2.

Rotation Adjustment

Loosen the lock screw-3. Rotate the rotation position to adjust the azimuth angle of the image. The adjusting range is from 0 degrees to 360 degrees. Tighten the lock screw-3.

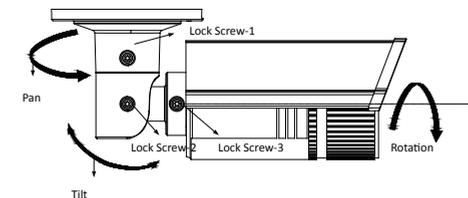

For detailed instructions of further configuration, please refer to the user manual of network camera.