
# **Quick Guide**


## **Unpacking**

Please make sure the package contains the following items:

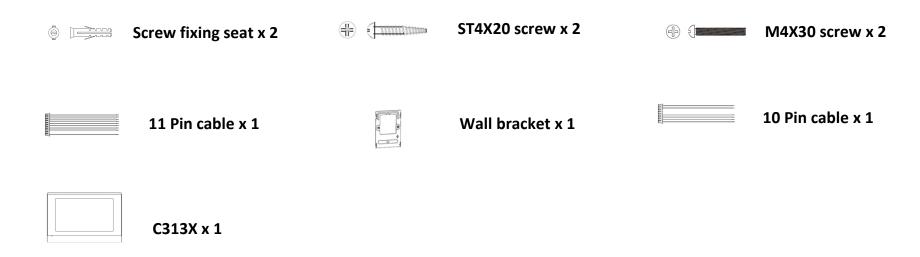


## **Product Overview**

### **Front Panel**

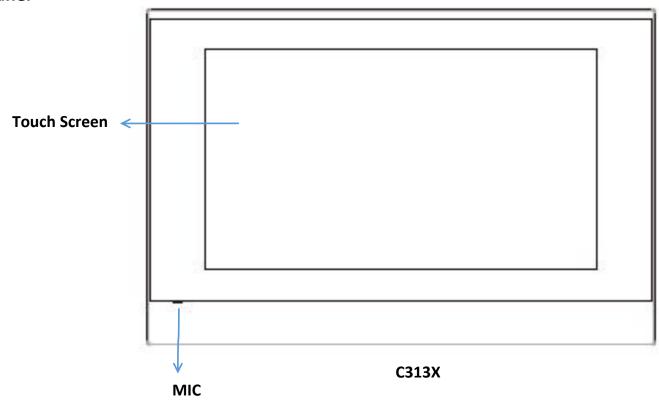


### **Rear Panel**

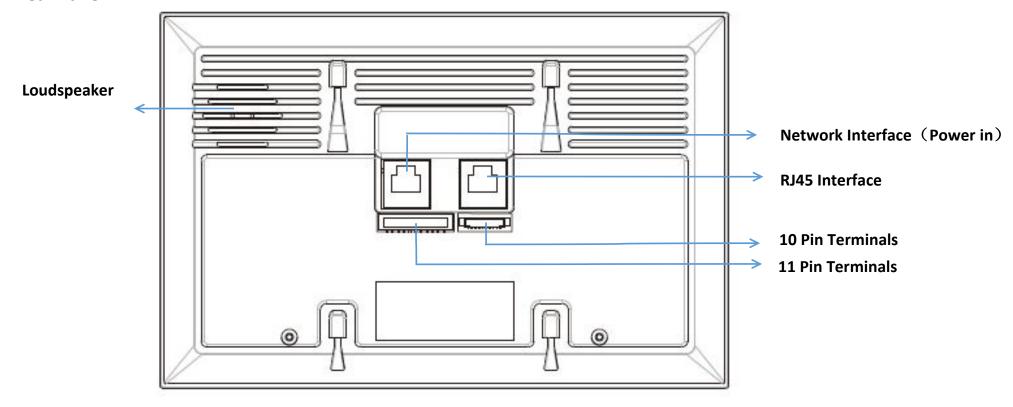

### Installation


#### Without 86 embedded box in the wall

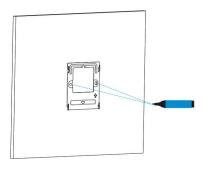

Mark two fixation holes through wall bracket on the wall, the distance between which is 60mm. Make sure the all cables can be passed from the middle of wall bracket.




Use two ST4X20 screws to fix the wall bracket on the wall.

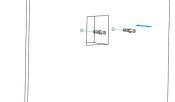


Take down the bracket, then using a 5mm hand drill to make the two fixation holes on the wall you marked before.

Once the fixation holes are made, insert the two screw fixing seats provided.

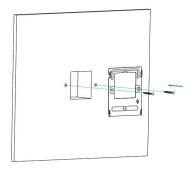


#### With 86 embedded box in the wall

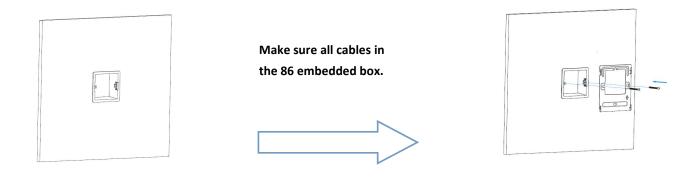

Fix the wall bracket on the 86 embedded box with two M4X30 screws.

### **Device Mounting**

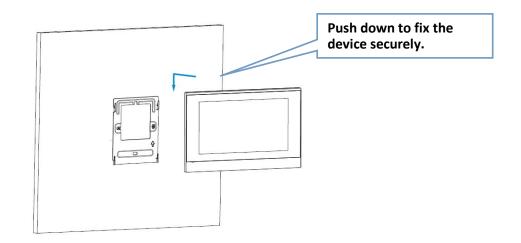

### **Configuration**

- 1. After setting up network and power, press **Status** icon to check IP address (DHCP by default).
- 2. Launch web browser and type in the IP address to access web interface, login with username and password. (admin by default).
- 3. Register the device with your SIP account. (please refer to user manual for more information).

### **Operation**

#### Make a call

Press Intercom key , enter the callee's number or room address , then choose Audio or Video mode to call out.

#### Receive a call

When receiving a video call, users can choose Audio or Video mode to answer. However, if there is an audio call, users can only press Audio mode to pick up.

#### **Unlock**

During the talk, press the Open Door key Open Door in talking interface to unlock the door.

#### **Monitor**

Press Monitor key to receive the video from indoor IPC or community IPC any time.

#### <u>sos</u>

Press SOS key SOS in case of an emergency.