




LXDB4I-WIFI LXDBCM-WIFI Reset





Doorbell reset

- Pry the “Reset” cover on the doorbell. Underneath should reveal a reset button requiring a pin to press.

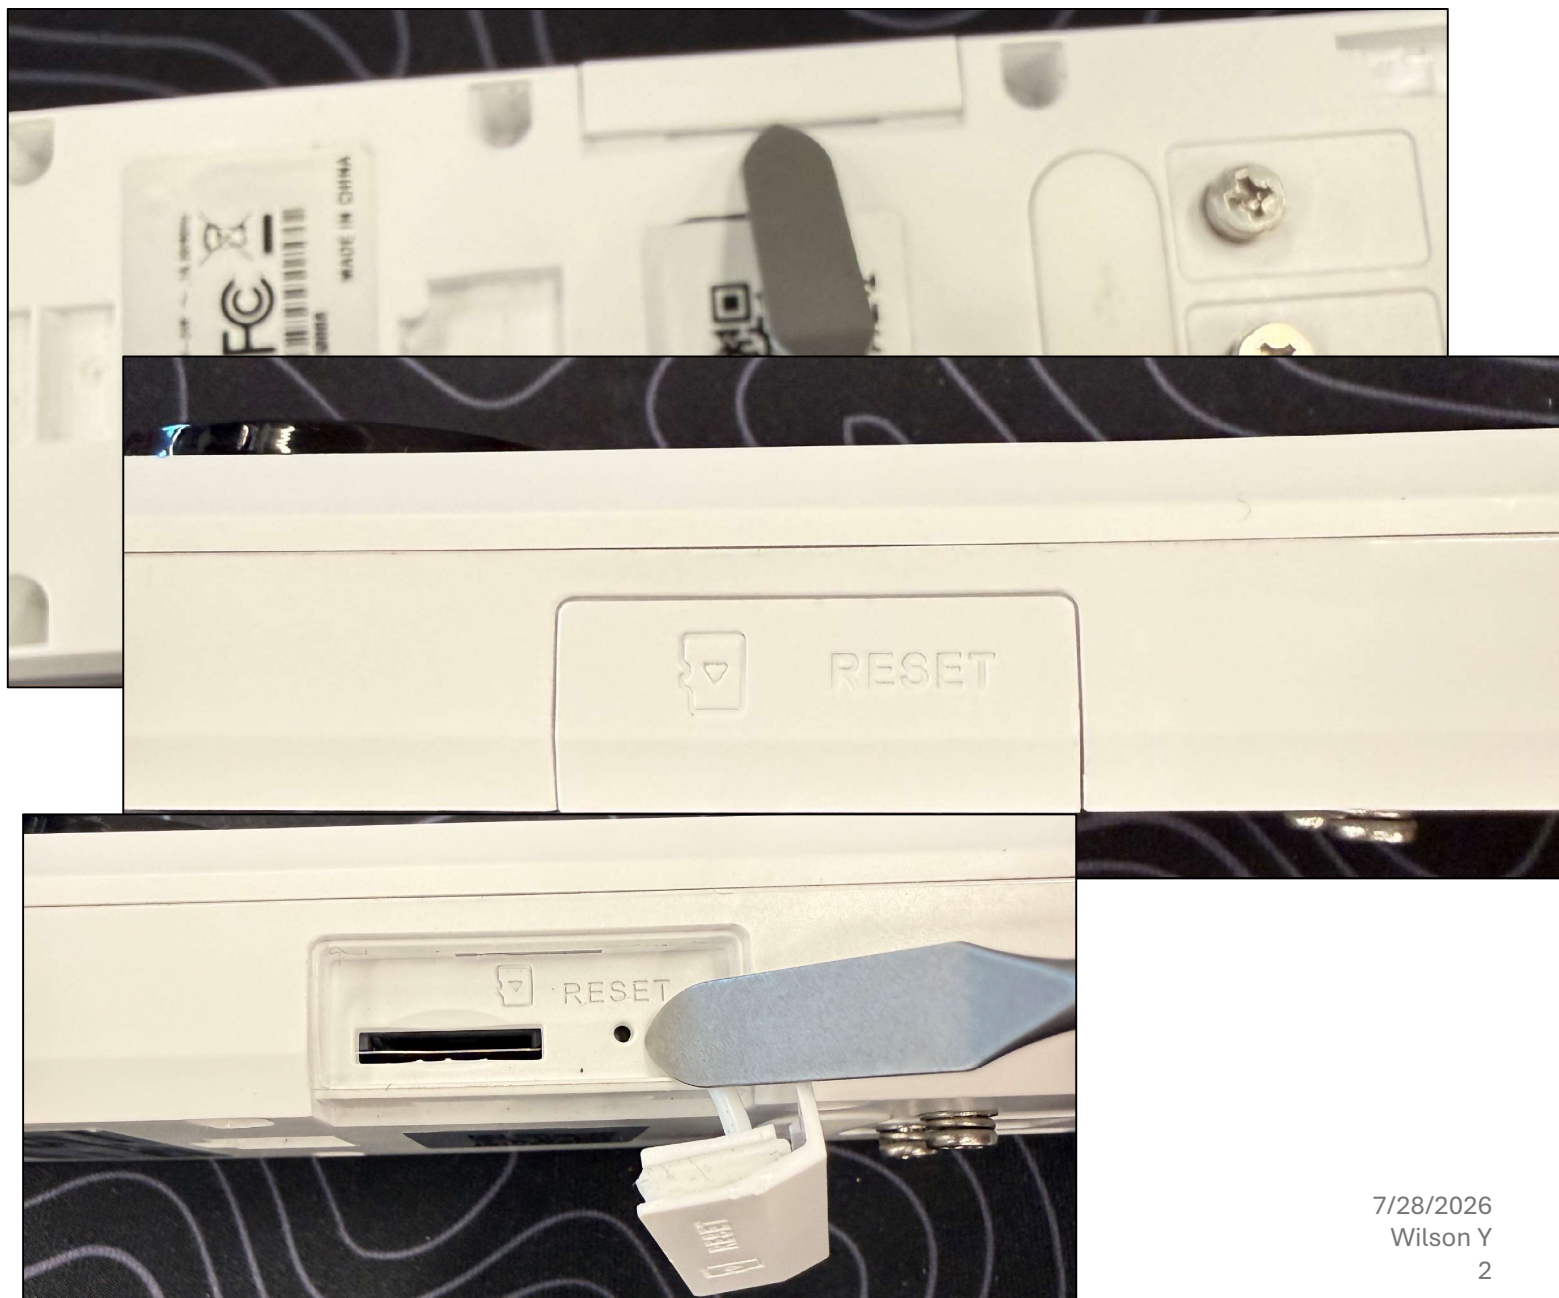



Doorbell reset

- With the pin, press and hold the reset button until the device sounds the audible alert “Hardware is resetting.” Lights should also flash a different color than its normal solid blue operation.
- When the device has fully reset, the doorbell will sound “Bluetooth is enabled” and ready for reactivation.



Chime reset

- The chime reset button is found on the left side of the device, no additional tools required. Audio cues should be similar that of the Doorbell in both resetting and when the chime is ready to pair.

