

Safety Requirements

⚠ WARNING

Installation Requirements

- Comply with all local electrical safety codes and standards when operating the product.
- Check if the power supply is correct before operating the product.
 - The power supply must conform to the IEC 60950-1 and IEC 62368-1 standards.
 - We recommend using the power adapter provided with the product (Some products do not come with a power adapter, please refer to the packing list).
 - The power supply requirements (such as rated voltage) are subject to the product label.
- Do not connect the product to more than two power supplies unless otherwise specified.
- The product must be installed in a location only professionals can access to avoid the risk of non-professionals becoming injured from accessing the area while the product is in operation. Professionals must have full knowledge of the safeguards and risks when using the product.

Operation Requirements

- Do not open the cover when the product is powered on.
- Do not touch the heat dissipation component of the product.

Working Environment

- The suitable temperature for the device is -25°C to +55°C.
- When powered on, please place the device in an environment with normal temperature and good ventilation.

Packing List



1 x Wireless Chime



2 x Product Literature


Add Device in App

- 1 Connect the chime to the appropriate power outlet to power it on.
- 2 Download and install the App. Open the App and register for a new account, then log in with your new credentials to begin.



- 3 Use the App to scan the QR code on the chime. Follow the on-screen instructions to add and configure the devices.

Component Introduction

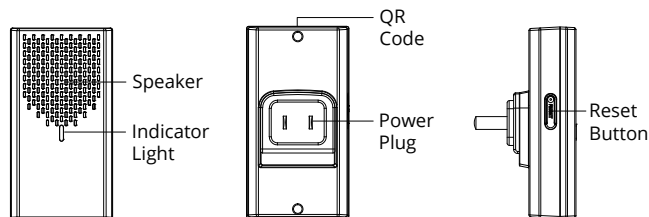

LED Indicator Status

Indicator Status	Description
Solid Green	The device is operating normally, and the network is functioning properly.
Flashing Green Quickly	The device is connecting to the network.
Flashing Green Slowly	The device is in network configuration mode.
Flashing Green and Red	The device firmware is being upgraded.
Solid Red	The device is starting up or there is a device malfunction.
Flashing Red	The device is unable to connect to the network.

Installation Guide

Connect the chime to the appropriate power outlet to power it on.

