



Turret Type IX Network Camera

Quick Installation Guide

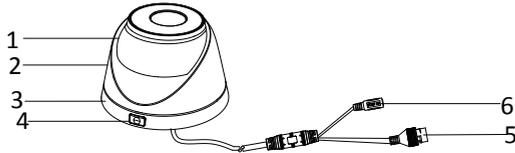

No.	Description
1	Camera Body
2	Enclosure
3	Mounting Base
4	Lock Button
5	Network Cable
6	Power Cord

3. Disassemble the camera by pressing the button on the camera.

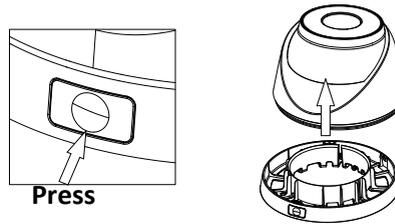


4. Fix the mounting base to the ceiling with supplied screws.

Notes:

- In the supplied screw package, both self-tapping screws, and expansion bolts are contained.
- If the ceiling is cement, expansion bolts are required to fix the camera. If the ceiling is wooden, self-tapping screws are required.

7. Connect the power cord and network cable.

8. Power on the camera, and set the network configuration (for details, refer to 3 Setting the Network Camera over the LAN and 4 Accessing via Web Browser) to check whether the image is gotten from the optimum angle. If not, adjust the surveillance angle.

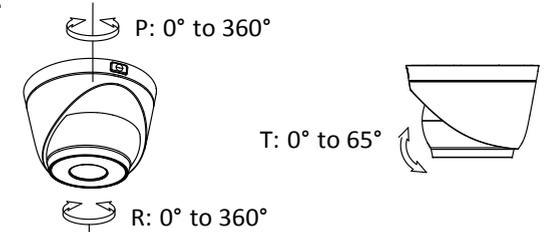



- 1). Hold the camera body and rotate the enclosure to adjust the pan angle [0° to 360°].
- 2). Move the camera body up and down to adjust the tilt angle [0° to 75°].
- 3). Rotate the camera body to adjust the rotation angle [0° to 360°].

Installation Ceiling Mounting Steps:


1. Paste the drill template (supplied) to the desired mounting position on the ceiling.
2. Drill the screw holes and the cable hole in the ceiling according to the drill template.

Note:

Drill the cable hole, if adopting ceiling outlet to route the cable.

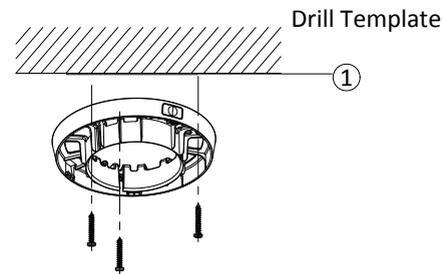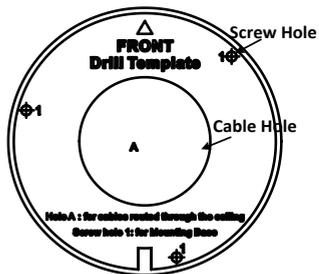

5. Route the cables through the cable hole or the side opening.
6. Install the camera body back to the mounting base.

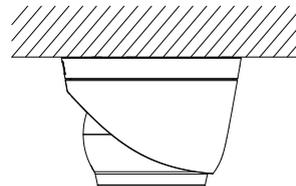

For detailed instructions of further configuration, please refer to the user manual of network camera.